







 

 

 





 

 

















Original	Sustituto
 Power	 Power
 Power VCR	 Shift + Power
 Mute	 Mute / Dimmer
 Tv Source	 AV / Input / RDS
 TXT	 Text / Goto
 1	 1
 2	 2
 3	 3
 Reveal	 Setup / OPT /
 4	 4
 5	 5
 6	 6
 List	 Smart / List
 7	 7
 8	 8
 9	 9
 Size	 Zoom / Size

Original	Sustituto
 P↔P	 Fav / Marker / PC
 0	 0
 -/--/Space	 Guide / EPG / -/--
 F[...]	 Subtitle / EQ
 Up	 Up
 Cancel	 Exit / Cancel / Clear
 Left	 Left
 Menu	 Menu / Home
 Index	 OK
 Right	 Right
 Down	 Down
 Vol+	 Vol+
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-
 Red/Surround	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Original	Sustituto
Yellow/Bass	Yellow / YouTube / Repeat
Blue/Timer	Blue / Prime Video / Random
▼ A-B	Audio / Lang I/II
Wide	Picture / Format
→←	TV/Radio /
Recall	Back / Return
PIP Mode	Shift + TV/Radio / Program
PIP Swap	Shift + Zoom /
PIP On	Sleep / Timer
Rec	Rec / Rec Mode
Stop	Stop / Hold
Stop	Shift + Stop /
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+

Original	Sustituto

