 

 
 

 
 


 


 


 
 
 

 







| Original  | Sustituto   |
|---|---|
|  Power           |  Power                   |
|  Info            |  Info / Angle            |
|  Mute            |  Mute / Dimmer           |
|  1               |  1                       |
|  2               |  2                       |
|  3               |  3                       |
|  4               |  4                       |
|  5               |  5                       |
|  6               |  6                       |
|  7               |  7                       |
|  8              |  8                      |
|  9             |  9                     |
|  Source        |  AV / Input / RDS      |
|  0             |  0                     |
|  O)/I-II/Audio |  Audio / Lang I/II     |
|  Menu          |  Menu / Home           |
|  Exit          |  Exit / Cancel / Clear |

| Original   | Sustituto  |
|--|--|
|  Up           |  Up                       |
|  Left         |  Left                     |
|  Enter        |  OK                       |
|  Right        |  Right                    |
|  Down         |  Down                     |
|  CH+          |  CH+ / Page+              |
|  Index        |  Display / Media          |
|  Vol+         |  Vol+                     |
|  CH-          |  CH- / Page-              |
|  List/Repeat  |  Smart / List             |
|  Vol-        |  Vol-                    |
|  ♥/Title    |  Fav / Marker / PC      |
|  Sleep/Menu |  Sleep / Timer          |
|  EPG/Setup  |  Guide / EPG / -/-      |
|  Recall     |  Back / Return          |
|  Red        |  Red / Netflix / Search |
|  <<         |  << / Tune-             |



