



Original	Sustituto	Original	Sustituto
 Photo	 Picture / Format	 Zero Set	 0
 Index	 Smart / List	 Display	 Display / Media
 Power	 Power		
 Memory -	 CH- / Page-		
 Memory +	 CH+ / Page+		
 T	 Vol+		
 Search M.	 Setup / OPT /		
 Play M	 OK		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 W	 Vol-		
 <<	 << / Tune-		
 Play	 Play / Slow		
 >>	 >> / Tune+		
 II Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 Slow I>	 Zoom / Size		

