



Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 Media	 Shift + Display / Media
 Aspect	 Zoom / Size
 PMode	 Picture / Format
 SMode	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0

Original	Sustituto
 Recall	 Back / Return
 Display	 Display / Media
 Eject	 Eject / Surround
 Rec	 Rec / Rec Mode
 Red/Program	 Red / Netflix / Search
 Green/Info	 Green / APP / Repeat
 Yellow/Goto	 Yellow / YouTube / Repeat
 Blue/AB	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit/DVD Setup	 Exit / Cancel / Clear





Original	Sustituto
CH+ / Page+	CH+ / Page+
Subtitle	Subtitle / EQ
Vol+	Vol+
CH-	CH- / Page-
T.Shift/Angle	Info / Angle
Vol-	Vol-
Play/Hold	Play / Slow
Pause	Pause / Step / Freeze
<</Reveal	<< / Tune-
>>/Size	>> / Tune+
Stop/Index	Stop / Hold
I<<	I<< / Preset-
>>/S.Page	>>I / Preset+
Text/Zoom	Text / Goto
FAV/DVD Menu	Fav / Marker / PC
Audio	Audio / Lang I/II
DTV	D.Menu / Top

Original	Sustituto
EPG/Title	Guide / EPG / -/--
Tv/Radio	TV/Radio /

