








































































Original	Sustituto
 1	 1
 Standby / On	 Power
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Right	 Right
 Enter	 OK
 Down	 Down
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Sustituto
 9	 9
 0	 0
 Display	 Display / Media
 DVD Set Up	 Setup / OPT /
 Top Menu	 D.Menu / Top
 Return	 Back / Return
 Menu	 Menu / Home
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Play	 Play / Slow
 <I	 << / Tune-
 I>	 >> / Tune+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 S Title	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Angle	 Info / Angle





Original	Sustituto	Original	Sustituto
On/Off	 Power	Menu Down	 Down
Audio Off	 Mute / Dimmer	Return	 Back / Return
Prev.	 I<< / Preset-	Volume+	 Vol+
Next	 >>I / Preset+	Auto/Track	 Smart / List
Title	 Sound / Title	Volume-	 Vol-
Lang	 Audio / Lang I/II	1	 1
Subt.	 Subtitle / EQ	2	 2
Zoom	 Zoom / Size	3	 3
Progr.	 TV/Radio /	4	 4
Top Menu	 D.Menu / Top	5	 5
C/CH	 Text / Goto	6	 6
DVD/TV	 AV / Input / RDS	7	 7
Menu	 Menu / Home	8	 8
Menu Up	 Up	9	 9
Menu Left	 Left	+10	 Guide / EPG / -/--
OK Enter	 OK	0	 0
Menu Right	 Right	Rep/A-B	 Yellow / YouTube / Repeat

Original	Sustituto	Original	Sustituto
On/Off	 Power	Menu Down	 Down
Audio Off	 Mute / Dimmer	Return	 Back / Return
Prev.	 I<< / Preset-	Volume+	 Vol+
Next	 >>I / Preset+	Auto/Track	 Smart / List
Title	 Sound / Title	Volume-	 Vol-
Lang	 Audio / Lang I/II	1	 1
Subt.	 Subtitle / EQ	2	 2
Zoom	 Zoom / Size	3	 3
Progr.	 TV/Radio /	4	 4
Top Menu	 D.Menu / Top	5	 5
C/CH	 Text / Goto	6	 6
DVD/TV	 AV / Input / RDS	7	 7
Menu	 Menu / Home	8	 8
Menu Up	 Up	9	 9
Menu Left	 Left	+10	 Guide / EPG / -/--
OK Enter	 OK	0	 0
Menu Right	 Right	Rep/A-B	 Yellow / YouTube / Repeat

