



Original	Sustituto
Power	Power
Menu	Menu / Home
Picture	Picture / Format
Input Tv	TV/Radio /
Input AV	AV / Input / RDS
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
i	Info / Angle
X/Exit	Exit / Cancel / Clear
Up	Up
Left	Left
OK	OK
Right	Right
Option	Setup / OPT /
Down	Down

Original	Sustituto
Back/Return	Back / Return
Netflix	Shift + Red / Netflix /
Home	Shift + Menu /
Guide	Guide / EPG / -/-
Mute	Mute / Dimmer
Text	Text / Goto
STTL	Subtitle / EQ
List/Provider	Smart / List
Vol+	Vol+
CH+	CH+ / Page+
Vol-	Vol-
CH-	CH- / Page-
1	1
2	2
3	3
4	4
5	5





Original		Sustituto	
	6		6
	7		7
	8		8
	9		9
	?/eHelp		D.Menu / Top
	0		0
	Recall		Fav / Marker / PC
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	<<		<< / Preset-
	Pause		Pause / Step / Freeze
	>>		>> / Preset+
	My APP		Shift + Green / APP /
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

Original		Sustituto	

