



 



 



 







 



 

 





 





 

 

 

 

 

 

 

 





Original	Sustituto	Original	Sustituto
 Power	 Power	 ATR	 D.Menu / Top
 Clock	 Sleep / Timer	 <<	 << / Tune-
 1	 1	 Play	 Play / Slow
 2	 2	 >>	 >> / Tune+
 3	 3	 Rec	 Rec / Rec Mode
 Prog	 TV/Radio /	 Stop	 Stop / Hold
 4	 4	 Pause / Still	 Pause / Step / Freeze
 5	 5	 Index	 Info / Angle
 6	 6	 Reset	 Exit / Cancel / Clear
 CL	 Menu / Home	 Memory	 Text / Goto
 7	 7		
 8	 8		
 9	 9		
 -	 CH- / Page-		
 0/AV	 AV / Input / RDS		
 0/AV	 0		
 +	 CH+ / Page+		

