

 





 





Original	Sustituto	Original	Sustituto
	Power		Power
	V.Surround	+	Shift + Eject / Surround
	Repeat		Green / APP / Repeat
	Open / Close		Eject / Surround
	Angle		Info / Angle
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	On/Off		Text / Goto
	Digest		Smart / List
	Set Up		Setup / OPT /
	Zoom		Zoom / Size
	Title		Sound / Title
	Up		Up
	Menu		Menu / Home
	Left		Left
	Enter		OK
	Right		Right
	Display		Display / Media
	Down		Down
	Return		Back / Return
	<< / Multi Speed-		<< / Tune-
	Play		Play / Slow
	>> / Multi		>> / Tune+
	I<		I<< / Preset-
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>I		>>I / Preset+
	1		1
	2		2
	3		3
	Clear		Exit / Cancel / Clear
	4		4
	5		5
	6		6





Original	Sustituto	Original	Sustituto
	0		0
	7		7
	8		8
	9		9
	Enter		Fav / Marker / PC



Mandis
DVD-15
Remote Control Unit
Nakamichi

Mandis
DVD-15
Remote Control Unit
Nakamichi