





 











 

















Original	Sustituto	Original	Sustituto
 Power	 Power		
 Slow/Still Adjust-	 Down		
 Slow/Still Adjust+	 Up		
 Audio Monitor	 Audio / Lang I/II		
 Rec	 Rec / Rec Mode		
 Pause	 Pause / Step / Freeze		
 X2	 Sleep / Timer		
 <	 Left		
 >	 Right		
 Slow	 Shift + Play /		
 << Search	 >> / Tune+		
 Play	 Play / Slow		
 Search >>	 << / Preset-		
 << Rew	 << / Tune-		
 FF >>	 >> / Preset+		
 Stop	 Stop / Hold		



