



Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 L/R/ST	 D.Menu / Top
 Open / Close	 Eject / Surround
 NTSC / PAL	 Picture / Format
 1	 1
 2	 2
 3	 3
 Angle	 Info / Angle
 4	 4
 5	 5
 6	 6
 Audio	 Audio / Lang I/II
 7	 7
 8	 8
 9	 9
 Subtitle	 Subtitle / EQ

Original	Sustituto
 0	 0
 +10	 Guide / EPG / -/-
 Clear	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Search	 Red / Netflix / Search
 Left	 Left
 Enter	 OK
 Right	 Right
 Set Up	 Setup / OPT /
 Down	 Down
 Play	 Play / Slow
 Title	 Sound / Title
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 PBC	 Smart / List
 Return	 Back / Return





Original	Sustituto	Original	Sustituto
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	Slow	+	Shift + Play /
	Program		TV/Radio /
	<< Scan		<< / Tune-
	Scan >>		>> / Tune+
	Repeat		Green / APP / Repeat
	AB		Yellow / YouTube / Repeat
	Zoom		Zoom / Size
	Step	+	Shift + Pause / Step /
	Vol-		Vol-
	Vol+		Vol+
	Display		Display / Media
	Key-		CH- / Page-
	Key+		CH+ / Page+

