



































Original	Sustituto	Original	Sustituto
On/Off	 Power	OK Enter	 OK
Mute	 Mute / Dimmer	Menu Right	 Right
Txt Stop	 Stop / Hold	Menu Down	 Down
Menu audio	 Audio / Lang I/II	Back	 Back / Return
Subt.List	 Subtitle / EQ	Volume+	 Vol+
Surround	 Eject / Surround	Chan.Up	 CH+ / Page+
Txt Expand	 Zoom / Size	Volume-	 Vol-
Sleep Timer	 Sleep / Timer	Display	 Display / Media
Return TV	 TV/Radio /	Chan.Down	 CH- / Page-
Menu video	 D.Menu / Top	1	 1
Reveal	 Setup / OPT /	2	 2
Text	 Text / Goto	3	 3
TV/AV	 AV / Input / RDS	4	 4
Menu	 Menu / Home	5	 5
Menu Up	 Up	6	 6
Info	 Info / Angle	7	 7
Menu Left	 Left	8	 8



