



Original	Sustituto
 Data Screen	 Smart / List
 On	 Power
 1	 1
 2	 2
 3	 3
 Prog+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Volume+	 Vol+
 0	 0
 1-	 Guide / EPG / -/--
 2-	 Fav / Marker / PC

Original	Sustituto
 Volume-	 Vol-
 Rec	 Rec / Rec Mode
 Pause	 Pause / Step / Freeze
 Frame	 Display / Media
 X2	 Picture / Format
 Wake Up	 OK
 X1/10	 Text / Goto
 X1/5	 AV / Input / RDS
 Muting	 Mute / Dimmer
 Counter Reset	 Back / Return
 Play	 Play / Slow
 <<	 << / Tune-
 >>	 >> / Tune+
 Stop	 Stop / Hold

