







 






























 








































Original	Sustituto
 Sleep	 Sleep / Timer
 Power	 Power
 CBL/SAT	 0
 Media Player	 4
 Blu-ray	 2
 Game	 Shift + 1
 AUX1	 7
 AUX2	 Guide / EPG / -/--
 TV Audio	 1
 CD	 3
 Tuner	 6
 USB	 8
 Phono	 Shift + 2
 Bluetooth	 9
 Heos	 5
 Internet Radio	 Fav / Marker / PC
 CH/Page+	 CH+ / Page+

Original	Sustituto
 Eco	 Menu / Home
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Info	 Info / Angle
 Option	 Shift + Setup / OPT / Tools
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Setup	 Setup / OPT /
 Tune- / I <<	 I << / Preset-
 Tune- / I <<	 << / Tune-
 Play / Pause	 Play / Slow





Original	Sustituto
 Sleep	 Sleep / Timer
 Power	 Power
 CBL/SAT	 0
 Media Player	 4
 Blu-ray	 2
 Game	 Shift + 1
 AUX1	 7
 AUX2	 Guide / EPG / -/--
 TV Audio	 1
 CD	 3
 Tuner	 6
 USB	 8
 Phono	 Shift + 2
 Bluetooth	 9
 Heos	 5
 Internet Radio	 Fav / Marker / PC
 CH/Page+	 CH+ / Page+

Original	Sustituto
 Volume+	 Vol+
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Back	 Back / Return
 Tune- / I<<<	 <<< / Tune-
 Tune- / I<<<	 I<<< / Preset-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Tune+ / >>>I	 >>> / Tune+
 Tune+ / >>>I	 >>>I / Preset+
 Smart Select 1	 Red / Netflix / Search



