



































Original	Sustituto	Original	Sustituto
PWR On/Off	 Power	CH/Page+	 CH+ / Page+
Mute	 Mute / Dimmer	Volume-	 Vol-
Tune-	 << / Tune-	TV/SAT	 Display / Media
Tune+	 >> / Tune+	CH/Page-	 CH- / Page-
Audio	 Audio / Lang I/II	1. ?	 1
Subt.List	 Subtitle / EQ	2abc	 2
Sleep Timer	 Sleep / Timer	3def	 3
Store	 Text / Goto	4ghi	 4
Menu	 Menu / Home	5jkl	 5
Menu Up	 Up	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 OK	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit / Cancel / Clear	Guide Pilote	 Guide / EPG / -/-
Menu Down	 Down	0/10	 0
Volume+	 Vol+	FAV Pref.	 Fav / Marker / PC
TV	 Smart / List	Red	 Red / Netflix / Search



