



Original	Sustituto
	Power
	Source
	P.Mode
	S.Mode
	Home
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Q.View
	0
	Info
	AV / Input / RDS
	Picture / Format
	Sound / Title
	Shift + Menu /
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Setup / OPT /
	0
	Info / Angle

Original	Sustituto
	Menu
	Up
	Guide
	Left
	OK
	Right
	Back
	Down
	Exit
	Vol+
	APP Store
	CH+ / Page+
	Vol-
	Mute
	CH- / Page-
	Tool
	FAV
	Menu / Home
	Up
	Guide / EPG / -/--
	Left
	OK
	Right
	Back / Return
	Down
	Exit / Cancel / Clear
	Vol+
	Display / Media
	CH+ / Page+
	Vol-
	Mute / Dimmer
	CH- / Page-
	TV/Radio /
	Fav / Marker / PC



