

Original	Sustituto	Original	Sustituto
On/Off	 Power	OK Enter	 OK
Mute	 Mute / Dimmer	Menu Right	 Right
Txt Stop	 Stop / Hold	Menu Off	 Exit / Cancel / Clear
Menu audio	 Audio / Lang I/II	Menu Down	 Down
Subt.List	 Subtitle / EQ	Back	 Back / Return
Reveal	 Picture / Format	Volume+	 Vol+
Txt Expand	 Zoom / Size	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 TV/Radio /	Display	 Display / Media
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
Update	 Setup / OPT /	1	 1
Text	 Text / Goto	2	 2
TV/AV	 AV / Input / RDS	3	 3
Menu	 Menu / Home	4	 4
Menu Up	 Up	5	 5
Info	 Info / Angle	6	 6
Menu Left	 Left	7	 7



Power **DIMMER MUTE** **SHIFT**

TV **DVD** **SAT** **AUX**
 SLOW STEP-FREEZE HOLD REC MODE

Play **Pause** **Stop** **Red Dot**
 TUNE- TUNE+ PRESET- PRESET+

Left Arrow **Right Arrow** **Double Left Arrow** **Double Right Arrow**
 TITLE LANG III EQ SURROUND

SOUND **AUDIO** **SUBTITLE** **Up Arrow**
 FORMAT SIZE TIMER PROGRAM

PICTURE **ZOOM** **SLEEP** **TV RADIO**
 TOP MENU OPT-TOOLS GOTO RDS

D.MENU **SETUP** **TEXT** **AV INPUT**

HOME **ANGLE**
MENU **Info**

OK (Center of directional pad)

Left Arrow **Right Arrow** **Up Arrow** **Down Arrow**

CLEAR **RETURN**
EXIT **BACK**

CANCEL **LIST** **+**
VOL **SMART** **CH PAGE**
- **MEDIA** **-**
DISPLAY

TV **DVD** **CD-STE**
1 **2** **3**
VIDEO **TAPE** **TUNER**
4 **5** **6**

AUX-HDD **USB** **BLUETOOTH**
7 **8** **9**
PC
HDMI - SAT **0** **FAV MARKER**

GUIDE EPG

NETFLIX **APP** **YouTube** **Prime Video**

SEARCH **REPEAT** **REPEAT A-B** **RANDOM**

Mandis
shop
 www.mandis.tv