

Original	Sustituto	Original	Sustituto
ON/Off	 Power	C/CH	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	Auto/Track	 Text / Goto
Stop	 Stop / Hold	Input Source	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Audio	 Audio / Lang I/II	Menu Down	 Down
Subt.	 Subtitle / EQ	Return	 Back / Return
Open/Close	 Eject / Surround	Volume+	 Vol+
Remain	 Picture / Format	DVD/TV	 Smart / List
Zoom	 Zoom / Size	Slow Up	 CH+ / Page+
Timer	 Sleep / Timer	Volume-	 Vol-



Original		Sustituto
Display		Display / Media
Slow Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
+10		Guide / EPG / -/-
0		0
Tone		Fav / Marker / PC
Np		Red / Netflix / Search
Repeat/1/All		Green / APP / Repeat
Rep/A-B		Yellow / YouTube / Repeat

[illegible]