



Original	Sustituto
 POWER	 Power
 TV/RADIO	 TV/Radio /
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 ENREG.	 Rec / Rec Mode
 STOP	 Stop / Hold
 PLAY/PAUSE	 Play / Slow
 PLAY/PAUSE	 Pause / Step / Freeze
 LISTE PVR	 Smart / List
 FORMAT	 Picture / Format
 RES.	 AV / Input / RDS
 TTX	 Text / Goto
 S-TITRES	 Subtitle / EQ
 1	 1
 2	 2

Original	Sustituto
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 RECALL	 Back / Return
 VOL +	 Vol+
 CH +	 CH+ / Page+
 VOL -	 Vol-
 MUTE	 Mute / Dimmer
 CH -	 CH- / Page-
 RED	 Red / Netflix / Search
 GREEN	 Green / APP / Repeat





Original	Sustituto
 YELLOW	 Yellow / YouTube / Repeat
 BLUE / TIMER	 Blue / Prime Video / Random
 INFO	 Info / Angle
 AUDIO	 Audio / Lang I/II
 GUIDE	 Guide / EPG / -/--
 UP	 Up
 LEFT	 Left
 OK	 OK
 RIGHT	 Right
 DOWN	 Down
 MENU	 Menu / Home
 QUITTER	 Exit / Cancel / Clear

Original	Sustituto

