




Original	Sustituto
	Menu / Home
	Up
	Power
	Left
	OK
	Right
	Down
	Exit / Cancel / Clear
	1
	2
	3
	4
	5
	6
	7
	8
	9

Original	Sustituto
	AV / Input / RDS
	0
	CH- / Page-
	CH+ / Page+
	<< / Tune-
	Play / Slow
	>> / Tune+
	Rec / Rec Mode
	Stop / Hold
	Pause / Step / Freeze
	Picture / Format
	Info / Angle
	Back / Return

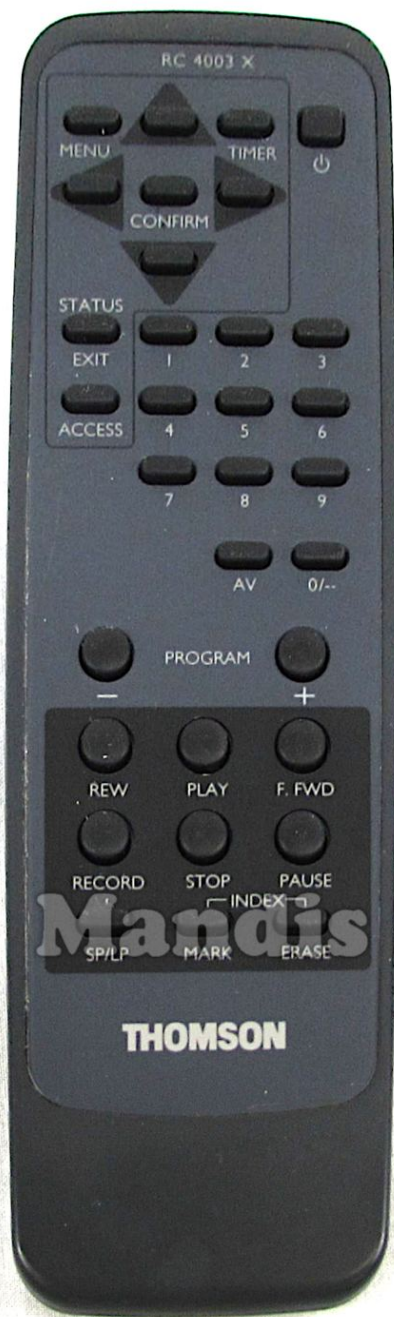