








 




 
 
 

 

 



 



 



 


 
 

 

 

 
 
 



 


 
 



 



 

 

 


 

 







 



 












Original	Sustituto	Original	Sustituto
 Power	 Power	 P.Mode/OK/[=i]	 OK
 Mute	 MUTE	 Up	 UP
 1	 1	 P+	 CH +
 2	 2	 P-	 CH -
 3	 3	 Down	 DOWN
 4	 4	 Right	 RIGHT
 5	 5	 Vol+	 VOL +
 6	 6	 Left	 LEFT
 7	 7	 Vol-	 VOL -
 8	 8	 AV	 SRC
 9	 9	 Menu	 MENU
 0	 0	 Play DVD	 Play
 Red	 Red (A)	 >> DVD	 Fast Forward
 Green	 Green (B)	 << DVD	 Rewind
 Yellow	 Yellow (C)	 Stop DVD	 Stop
 Blue	 Blue (D)	 Power DVD	 Shift + Power
 [=]	 TEXT	 Down DVD	 First





Original	Sustituto	Original	Sustituto
 Up DVD	 Last		
 i	 INFO		
 [+]/Timer	 Subt.		
 Power VCR	 VOD		
 << VCR	 Shift + LEFT		
 Play VCR	 Shift + OK		
 >> VCR	 Shift + RIGHT		
 Up VCR	 Shift + CH +		
 Down VCR	 Shift + CH -		
 Rec VCR	 Rec		
 Stop VCR	 Shift + DOWN		

