












































 

 



 












Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute / Dimmer
	TV/RAD		TV/Radio /
	www		Sleep / Timer
	PIP		Zoom / Size
	Grid		D.Menu / Top
	Swap		Back / Return
	Sub ch		Setup / OPT /
	P/Pg+		CH+ / Page+
	RCL		Display / Media
	Vol+		Vol+
	P/Pg-		CH- / Page-
	i		Info / Angle
	Vol-		Vol-
	FAV		Fav / Marker / PC
	Check		Smart / List
	Message		Eject / Surround
	EPG		Guide / EPG / -/-
	Up		Up
	Menu		Menu / Home
	Left		Left
	OK		OK
	right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3
	4		4
	5		5





Original	Sustituto
6	6
7	7
8	8
9	9
Music	Sound / Title
0	0
Photo	Picture / Format
Rec	Rec / Rec Mode
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
Recall	AV / Input / RDS
>	>>  / Preset+
Stop/→	Stop / Hold
Pause	Pause / Step / Freeze
[ ]]]	Shift + Zoom /
[... ]	Subtitle / EQ

Original	Sustituto
TXT	Text / Goto
Audio	Audio / Lang I/II

