



Original	Sustituto	Original	Sustituto
	Standby		Power
	Mute		Mute
	EPG		Guide
	Audio		Dual
	Info		Info
	DTV/VCR		Smart
	TTX		Text
	Subtitle		Subt
	Menu		Menu
	Exit		Exit
	CH+		Ch +
	CH-		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Favorite		Pre Ch
	Tv/Radio		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Goto		Options
	Recall		Back
	<<		<<





	Original	Sustituto		Sustituto
	>>		>>	
	I<<		I<<	
	>>I		>>I	
	Play		Play	
	Pause		Pause	
	Stop		Stop	
	Repeat	 + 	Shift + Text	
	Red		Red	
	Green		Green	
	Yellow		Yellow	
	Blue		Blue	

Original	Sustituto

