













 



 























 


































Original	Sustituto
 Power	 Power
 Text	 Text / Goto
 △	 Setup / OPT /
 Help	 Zoom / Size
 Rec	 Rec / Rec Mode
 D.Menu / Top	 D.Menu / Top
 Stop	 Stop / Hold
 <<	 << / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Sustituto
 7	 7
 8	 8
 9	 9
 Back	 Back / Return
 0	 0
 Enter	 Fav / Marker / PC
 Vol+	 Vol+
 Language	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-
 Guide	 Guide / EPG / -/-
 Up	 Up
 Info	 Info / Angle
 Left	 Left
OK	OK






















 























Original	Sustituto
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Digital TV	 Smart / List
 Movie	 Picture / Format
 Radio	 TV/Radio /
 Media	 Display / Media

Original	Sustituto





Original	Sustituto
 Power	 Power
 Text	 Text / Goto
 △	 Setup / OPT /
 Help	 Zoom / Size
 Rec	 Rec / Rec Mode
 D.Menu / Top	 D.Menu / Top
 Stop	 Stop / Hold
 <<	 << / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Sustituto
 7	 7
 8	 8
 9	 9
 Back	 Back / Return
 0	 0
 Enter	 Fav / Marker / PC
 Vol+	 Vol+
 Language	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-
 Guide	 Guide / EPG / -/--
 Up	 Up
 Info	 Info / Angle
 Left	 Left
OK	OK





Original	Sustituto
	 Right
	 Menu / Home
	 Down
	 Exit / Cancel / Clear
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Smart / List
	 Picture / Format
	 TV/Radio /
	 Display / Media

Original	Sustituto

