



Original	Sustituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Recall	Back / Return
0	0
Source	AV / Input / RDS
Vol+	Vol+
A/D/Content Menu	Smart / List
P+	CH+ / Page+
Vol-	Vol-



































 








 
 
 
 





















Original	Sustituto
Mute	Mute / Dimmer
P-	CH- / Page-
Menu/DVD	Menu / Home
Exit/Return	Exit / Cancel / Clear
Up	Up
Left	Left
OK	OK
Right	Right
Guide/Top	Guide / EPG / -/-
Down	Down
Tv/FAV/Radio/Set	TV/Radio /
Tv/FAV/Radio/Set	Fav / Marker / PC
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
[<>]	Picture / Format











 

 












 











Original	Sustituto	Original	Sustituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV / Input / RDS
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Menu/DVD		Menu / Home
	Exit/Return		Back / Return
			Up
			Left
			OK
			Right
			Guide/Top
			Down
			Tv/FAV/Radio/Set
			[<>]
			Display / Media
			[i+]/[≡i]
			Text
			Audio
			Subtitle
			Eject
			O)/I/I
			Stop
			Play/[≡o]
			Up
			Left
			OK
			Right
			D.Menu / Top
			Down
			Setup / OPT /
			Picture / Format
			Display / Media
			Info / Angle
			Text / Goto
			Audio / Lang I/II
			Subtitle / EQ
			Eject / Surround
			Shift + Audio / Lang I/II
			Stop / Hold
			Play / Slow









Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Back / Return
 0	 0
 Source	 AV / Input / RDS
 Vol+	 Vol+
 A/D / Content	 Smart / List
 P+	 CH+ / Page+
 Vol-	 Vol-

Original	Sustituto
 Mute	 Mute / Dimmer
 P-	 CH- / Page-
 Menu/DVD	 Menu / Home
 Exit/Return	 Shift + Back / Return
 Exit/Return	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Guide/Top	 D.Menu / Top
 Down	 Down
 Tv/FAV/Radio/Set	 TV/Radio /
 Tv/FAV/Radio/Set	 Setup / OPT /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random





Original	Sustituto	Original	Sustituto
[ $\ll$ >]	Picture / Format		
$\leftarrow$ [/] $\rightarrow$	Display / Media		
[i+] / [≡i]	Info / Angle		
Text	Text / Goto		
Audio	Audio / Lang I/II		
Subtitle	Subtitle / EQ		
Eject	Eject / Surround		
O)I/II	+  Shift + Audio / Lang I/II		
Stop	Stop / Hold		
Play/[≡o]	Play / Slow		
II/II > / [∇]	Pause / Step / Freeze		
I << / [≡?]	I << / Preset-		
<< / [≡+]	<< / Tune-		
>> / [≡◇]	>> / Tune+		
>> I / [O] / [≡X]	>> I / Preset+		

