




























Original	Sustituto
	 Power
	 Smart / List
	 Sleep / Timer
	 Mute / Dimmer
	 Vol+
	 AV / Input / RDS
	 CH+ / Page+
	 Vol-
	 Picture / Format
	 CH- / Page-
	 TV/Radio /
	 Eject / Surround
	 Audio / Lang I/II
	 Play / Slow
	 Pause / Step / Freeze
	 Display / Media
	 Stop / Hold

Original	Sustituto
	 Subtitle / EQ
	 Menu / Home
	 Up
	 Exit / Cancel / Clear
	 << / Tune-
	 Left
	 OK
	 Right
	 Fav / Marker / PC
	 >>I / Preset+
	 Down
	 >> / Tune+
	 Guide / EPG / -/-
	 I<< / Preset-
	 Text / Goto
	 Info / Angle
	 Red / Netflix / Search





Original	Sustituto
 Red/Dvd Menu	 D.Menu / Top
 Green/Lang	 Green / APP / Repeat
 Green/Lang	 Shift + Audio / Lang I/II
 Yellow/Repeat	 Yellow / YouTube / Repeat
 Yellow/Repeat	 Shift + Green / APP / Repeat
 Blue/Dvd Setup	 Blue / Prime Video / Random
 Blue/Dvd Setup	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / -/--	 Shift + Guide / EPG / -/--

Original	Sustituto
 0	 0
 Return	 Back / Return

