







 

 







 















 




Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 FAV	 Fav / Marker / PC
 Recall	 Back / Return
 Menu	 Menu / Home
 Source	 AV / Input / RDS
 EPG	 Guide / EPG / -/--

Original	Sustituto
 Exit	 Exit / Cancel / Clear
 Up/FAV+	 Up
 Down/FAV-	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Display	 Display / Media
 Open/Close/Smart	 Eject / Surround
 VOL+	 Vol+
 Vol-	 Vol-
 USB/Media	 Shift + Display / Media
 Play/Pause/Text	 Play / Slow
 Stop/Index	 Stop / Hold
 Rec/Media2	 Rec / Rec Mode
 I<</Hold	 I<< / Preset-





	Original	Sustituto	Original	Sustituto
	SIZE >>/Size	PRESET+ >>I / Preset+	S.TITLE	STEP - FREEZE Pause / Step / Freeze
	S.PAGE <</S.Page	TUNE- << / Tune-	RADIO Tv/Radio	PROGRAM TV/RADIO /
	REVEAL >>/Reveal	TUNE+ >> / Tune+		
	Red/Goto	Red / Netflix / Search		
	Green/Slow	Green / APP / Repeat		
	Yellow/REPT	Yellow / YouTube / Repeat		
	Blue/A-B	Blue / Prime Video / Random		
	D.Setup	Setup / OPT /		
	D.Menu	D.Menu / Top		
	D.Title	Smart / List		
	D.Prog	Text / Goto		
	I-II/Nicam	Shift + Picture / Format		
	P.Mode	Picture / Format		
	S.Mode	Sound / Title		
	P.Size	Zoom / Size		
	Audio	Audio / Lang I/II		
	Sleep	Sleep / Timer		

