
















 












































 
















 

























| Original | Sustituto | Original | Sustituto |
|---|--------------------------|---|-----------------------|
|  | Power |  | Tv/Radio |
|  | Mute |  | i |
|  | USB/Media 1 |  | Sleep |
|  | USB/Media 1 |  | Source |
|  | Play/Pause/Text |  | Menu |
|  | Play/Pause/Text |  | Left |
|  | Play/Pause/Text |  | Up |
|  | Stop/Index |  | Right |
|  | Rec/Media2 |  | OK |
|  | Rec/Media2 |  | Down |
|  | I<</Hold |  | Mouse |
|  | >>I/Size |  | Smart |
|  | <</S.Page |  | Exit |
|  | >>/Reveal |  | CH+ |
|  | I-II/Nicam |  | EPG |
|  | Audio |  | VOL+ |
|  | Subtitle |  | CH- |
|  | Mute / Dimmer |  | TV/Radio / |
|  | Display / Media |  | Info / Angle |
|  | Shift + 8 |  | Sleep / Timer |
|  | Text / Goto |  | AV / Input / RDS |
|  | Play / Slow |  | Menu / Home |
|  | Pause / Step / Freeze |  | Left |
|  | Stop / Hold |  | Up |
|  | Rec / Rec Mode |  | Right |
|  | Shift + Display / Media |  | OK |
|  | I<< / Preset- |  | Down |
|  | >>I / Preset+ |  | Shift + OK |
|  | << / Tune- |  | Smart / List |
|  | >> / Tune+ |  | Exit / Cancel / Clear |
|  | Shift + Picture / Format |  | CH+ / Page+ |
|  | Audio / Lang I/II |  | Guide / EPG / -/- |
|  | Subtitle / EQ |  | Vol+ |
| | |  | CH- / Page- |





| Original | Sustituto |
|--|--|
|  Open/Close |  Eject / Surround |
|  Vol- |  Vol- |
|  D.Setup |  Setup / OPT / |
|  Picture |  Picture / Format |
|  D.Menu |  D.Menu / Top |
|  Sound |  Sound / Title |
|  D.Title |  Shift + Sound / Title |
|  P.Size |  Zoom / Size |
|  D.Prog |  Shift + TV/Radio / Program |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |

| Original | Sustituto |
|--|---|
|  9 |  9 |
|  FAV |  Fav / Marker / PC |
|  0 |  0 |
|  Recall |  Back / Return |
|  Red |  Red / Netflix / Search |
|  Green |  Green / APP / Repeat |
|  Yellow |  Yellow / YouTube / Repeat |
|  Blue |  Blue / Prime Video / Random |

