

 

 
 
 

 

 

 

 




 



 





 


 


 



 
 
 

 






 


 

 
 


 



 






 






 
 




 
 



 


 

 





Original	Sustituto	Original	Sustituto
 Standby	 Power	 Right	 Right
 Rec PVR	 Rec	 Vol+	 Vol +
 List PVR	 Smart	 Favourite	 Pre Ch
 Mute	 Mute	 CH-	 Ch -
 EPG	 Guide	 Down	 Down
 Info	 Info	 Tv/Radio	 TV/R
 TTX	 Text	 1	 1
 Audio	 Dual	 2	 2
 DTV/VCR	 Media	 3	 3
 Subtitle	 Subt	 Recall	 Back
 Menu	 Menu	 4	 4
 CH+	 Ch +	 5	 5
 Up	 Up	 6	 6
 Exit	 Exit	 Goto	 Options
 Left	 Left	 7	 7
 Vol-	 Vol -	 8	 8
 OK	 Ok	 9	 9

 



 



 





 
 


 

 

 



 
 



 
 

 





 
 


 


 
 





 

 


 












	Original	Sustituto		Original	Sustituto
	0		0		
	<<		<<		
	>>		>>		
	I<<		I<<		
	>>I		>>I		
	Play		Play		
	Pause		Pause		
	Stop		Stop		
	Repeat	 + 	Shift + Text		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		





Original	Sustituto	Original	Sustituto
 Standby	 Power	 Down	 Down
 Rec PVR	 Rec	 Right	 Right
 List PVR	 Smart	 Left	 Left
 Mute	 Mute	 OK	 Ok
 EPG	 Guide	 Vol+	 Vol +
 Audio	 Dual	 Vol-	 Vol -
 Info	 Info	 1	 1
 DTV/VCR	 Media	 2	 2
 TTX	 Text	 3	 3
 Subtitle	 Subt	 4	 4
 Menu	 Menu	 5	 5
 Exit	 Exit	 6	 6
 Favourite	 Pre Ch	 7	 7
 Tv/Radio	 TV/R	 8	 8
 CH+	 Ch +	 9	 9
 CH-	 Ch -	 0	 0
 Up	 Up	 Recall	 Back





	Original	Sustituto	Original	Sustituto
	Goto	AV		
	<<	<<		
	>>	>>		
	<<	<<		
	>>	>>		
	Play	Play		
	Pause	Pause		
	Stop	Stop		
	Repeat	+ Shift + Text		
	Red	Red		
	Green	Green		
	Yellow	Yellow		
	Blue	Blue		

