




Original	Sustituto
 On / Off	 Power
 Eject	 Eject
 DVD	 Smart
 DVD	 Red
 TV	 Media
 TV	 Green
 AM/FM	 Yellow
 A/V	 Blue
 A/V	 AV
 Setup	 Options
 TEL	 D. Menu
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Seek Up	 Right
 Left / Seek Dn	 Left

Original	Sustituto
 Enter	 Ok
 Menu	 Menu
 Mute	 Mute
 <<	 <<
 Stop	 Stop
 I>	 Shift + Play
 >>	 >>
 I<<	 I<<
 Play / Pause	 Play
 Play / Pause	 Pause
 >>I	 >>I
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





Original		Sustituto	
	7		7
	8		8
	9		9
	0		0
	Vol+		Vol +
	Vol-		Vol -
	Title		List
	Display		Info
	Repeat		Text
	Search		TV/R
	Sub Title		Subt
	Audio		Dual
	Zoom	+	Shift + Eject
	A-B	+	Shift + Text
	Screen		Format
	Angle / AP		3D
	Step / Add		Guide

Original		Sustituto	
	Step / Add	+	Shift + Pause
	Delete		Pre Ch

