 




 

 

 
 
 
 
 
 
 









 




 




 

 
 
 


 





Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute
	FAV		Pre Ch
	Subtitle		Subt
	Info		Info
	TTX		Text
	Recall		Back
	List		List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	EPG		Guide
	Vol +		Vol +
	Vol -		Vol -
	Timer		AV
	Pg Dn		Shift + Ch -
	Pg Up		Shift + Ch +
	<<		<<
	>>		>>
	I<<		I<<





Original		Sustituto		Original		Sustituto	
	>>I		>>I				
	CH +		Ch +				
	CH -		Ch -				
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	Audio		Dual				
	PAL / NTSC		3D				
	Sleep		Sleep				
	TV / Radio		TV/R				
	Red		Red				
	Aspect		Format				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				





Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute
	FAV		Pre Ch
	Subtitle		Subt
	Info		Info
	TTX		Text
	Recall		Back
	List		List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Exit		Exit
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	EPG		Guide
	Vol +		Vol +
	Vol -		Vol -
	Timer		AV
	Pg Dn		Shift + Ch -
	Pg Up		Shift + Ch +
	<<		<<
	>>		>>
	I<<		I<<




 

 
 

 








 




 
 








 

	Original	Sustituto
	>>I	 >>I
	CH +	 Ch +
	CH -	 Ch -
	Play	 Play
	Pause	 Pause
	Stop	 Stop
	Audio	 Dual
	PAL / NTSC	 3D
	Sleep	 Sleep
	TV / Radio	 TV/R
	Red	 Red
	Aspect	 Format
	Green	 Green
	Yellow	 Yellow
	Blue	 Blue

	Original	Sustituto





Original	Sustituto	
Power		Power
Mute		Mute
FAV		Pre Ch
Subtitle		Subt
Info		Info
TTX		Text
List		List
Recall		Back
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9

Original	Sustituto	
0		0
Menu		Menu
Exit		Exit
EPG		Guide
Swap		Media
Up		Up
Down		Down
Right		Right
Left		Left
OK		Ok
Vol+		Vol +
Vol-		Vol -
Pg Up		Shift + Up
PG Dn		Shift + Down
CH+		Ch +
CH-		Ch -
>>		>>





Original	Sustituto	Original	Sustituto
<<		<<	
>>		>>	
I<<		I<<	
Play		Play	
Pause/Timeshift		Pause	
Stop		Stop	
Rec		Rec	
Audio		Dual	
M/P		Smart	
Tv/Radio		TV/R	
A-B		Options	
Red/Zoom		Red	
Green/Aspect		Green	
Yellow/V-Formet		Yellow	
Blue/Timer		Blue	

