



Original	Sustituto
 Power	 Power
 Source	 AV / Input / RDS
 e	 Smart / List
 Aspect/Ratio	 Picture / Format
 Resync	 Setup / OPT /
 Hide	 TV/Radio /
 Zoom	 Zoom / Size
 Mute	 Mute / Dimmer
 Freeze	 Pause / Step / Freeze
 Left	 Left
 Up	 Up
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 1/I/Left/Right	 1
 2/Enter/Play/Pause	 2
 3/Back/Stop	 3

Original	Sustituto
 PgUp/>> />>	 CH+ / Page+
 4/VGA	 4
 5/Component	 5
 6/Video	 6
 PgDn/S.Video	 CH- / Page-
 7/SD/USB A	 7
 8/HDMI/DVI	 8
 9/LAN/WIFI	 9
 0/USB-B	 0

