



Original	Sustituto	Original	Sustituto
	POWER		Power
	SOURCE		AV / Input / RDS
	DVD/CARD/USB		Smart / List
	MUTE		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide / EPG / -/--
	GOTO		Text / Goto
	SUBTITLE		Subtitle / EQ
	ANGLE		Info / Angle
	AUDIO		Audio / Lang I/II
	PBC		Picture / Format
	TITLE		Sound / Title
	UP		Up
	STOP		Stop / Hold
	PLAY/PAUSE		Play / Slow
	LEFT		Left
	ENTER		OK
	RIGHT		Right
	MODE		D.Menu / Top
	SETUP		Setup / OPT /
	DOWN		Down
	ZOOM		Zoom / Size
	MENU		Menu / Home
	REPEAT		Green / APP / Repeat
	A-B		Yellow / YouTube / Repeat





Original	Sustituto	Original	Sustituto
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	PROGRAM		TV/Radio /
	DISPLAY		Display / Media
	<<		<< / Tune-
	>>		>> / Tune+

