







 



 


 
 





 
 


 

 





 





 







 

 

 









 

 







Original	Sustituto	Original	Sustituto
 Standby	 Power	 Zoom	 Zoom / Size
 Open/Close	 Eject / Surround	 0/10	 0
 Goto	 Shift + Text /	 10+	 Guide / EPG / -/-
 Step	 Shift + Pause / Step /	 A-B	 Yellow / YouTube / Repeat
 Prog	 TV/Radio /	 OSD	 Display / Media
 Mute	 Mute / Dimmer	 Repeat	 Green / APP / Repeat
 1	 1	 Menu	 Menu / Home
 2	 2	 Volume+	 Vol+
 3	 3	 Angle	 Info / Angle
 Audio	 Audio / Lang I/II	 Video	 Shift + 4
 4	 4	 Slow	 Shift + Play /
 5	 5	 Volume-	 Vol-
 6	 6	 Setup	 Setup / OPT /
 Subtitle	 Subtitle / EQ	 Up	 Up
 7	 7	 L/R	 Text / Goto
 8	 8	 Left	 Left
 9	 9	 Enter	 OK





Original	Sustituto	Original	Sustituto
	Right		Right
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Down		Down
	N/P		Picture / Format
	Title		Sound / Title
	DVD/USB		Shift + 2
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+

