
 
 


 










Original		Sustituto		Original		Sustituto	
	POWER		Power		INFO		Info
	MUTE		Mute		TV/RADIO		TV/R
	1		1		CH+		Ch +
	2		2		CH-		Ch -
	3		3		LCD MENU		Menu
	4		4		DVB MENU		D. Menu
	5		5		Up		Up
	6		6		Down		Down
	7		7		Right		Right
	8		8		Left		Left
	9		9		Enter		Ok
	0		0		INPUT		AV
	-/-		Guide		P.MODE		Shift + Format
	Recall		Back		S.MODE		Dual
	VOL+		Vol +		SLEEP		Sleep
	VOL-		Vol -		LIST		List
	NICAM		Smart		FAV		Pre Ch





Original	Sustituto	Original	Sustituto
 PAGE-	 <<		
 PAGE+	 >>		
 TEXT	 Text		
 HOLD	 Options		
 EXIT	 Exit		
 EPG	 Shift + Guide		
 INDEX	 3D		
 SUBTITLE	 Subt		
 SIZE	 Format		
 REVEAL	 Media		
 RED	 Red		
 GREEN/AUDIO	 Green		
 YELLOW/PAUSE	 Yellow		
 BLUE	 Blue		

