



Original	Sustituto
Timer	+ Shift + Sleep / Timer
Sleep	Sleep / Timer
Clock	D.Menu / Top
Edit/Check	Display / Media
PRGM	Setup / OPT /
Random	Blue / Prime Video / Random
Repeat/Mono	Green / APP / Repeat
Disc Direct Play 1	+ Shift + 1
Disc Direct Play 2	+ Shift + 2
Disc Direct Play 3	+ Shift + 3
Open/Close	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6

Original	Sustituto
7	7
8	8
9	9
0	0
+10	Guide / EPG / -/-
Karaoke Enter	OK
Karaoke/Vocal/Fader/Multiplex	TV/Radio /
T-Bass	Audio / Lang I/II
GEQ	Zoom / Size
CD	+ Shift + 4
Video/AUX	+ Shift + 7
<</Tuning-	<< / Tune-
I<</Down	I<< / Preset-
>>/Tuning+	>> / Tune+
>>I/Up	>>I / Preset+
Tuner/Band	+ Shift + 6





Original	Sustituto
Rec/Rec Mute	Rec / Rec Mode
Stop/Clear	Stop / Hold
Pause/Set	Pause / Step / Freeze
Tape Deck 1/2	Shift + 5
Power	Power
Volume Down	Vol-
Volume Up	Vol+

Original	Sustituto

