

 

 
 
 
 
 

 
 
 


 


 


 


 

 

 

 

 





Original	Sustituto
 POWER	 Power
 INFO	 Info
 HDMI CONTROL	 Media
 SLEEP	 Sleep
 SCREEN	 Format
 SOURCE	 AV
 PRESETS	 Options
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Sustituto
 RETURN	 Back
 MENU	 Menu
 ZOOM/RED/▲	 Red
 REPEAT/GREEN/▼	 Green
 ROOT/YELLOW	 Shift + Yellow
 TITLE/BLUE	 Blue
 OK/SELECT	 Ok
 UP	 Up
 DOWN	 Down
 RIGHT	 Right
 LEFT	 Left
 P+	 Ch +
 P-	 Ch -
 V+	 Vol +
 V-	 Vol -
 FAV	 Pre Ch
 LANG	 Dual





Original	Sustituto	Original	Sustituto
	SUBTITLE		Subt
	MUTE		Mute
	SWAP/↔		Exit
	EPG		Guide
	-/--		Shift + Guide
	TEXT		Text
	C		Yellow
	DISPLAY		Shift + Info
	ANGLE		3D
	SEARCH MODE		TV/R
	REC		Rec
	STOP		Stop
	PLAY		Play
	PAUSE		Pause
	<<		<<
	>>		>>
	I<<		I<<

Original	Sustituto	Original	Sustituto
	>>I		>>I

