


 

 



 



 
 
 

 

 



 

 

 

 



 




 














 


















Original	Sustituto
 Power	 Power
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 I / II	 Smart
 I / II	 Dual
 Sleep	 Sleep
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 CH. List	 List

Original	Sustituto
 Recall	 Pre Ch
 Source	 AV
 Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Info	 Info
 Exit	 Exit
 Vol +	 Vol +
 Vol -	 Vol -
 Mute	 Mute
 Aspect	 Format
 CH +	 Ch +
 CH -	 Ch -
 Play / Pause / EPG	 Play





Original	Sustituto
Play / Pause / EPG	Guide
Play / Pause / EPG	Pause
Stop / Fav	Stop
Stop / Fav	Shift + Pre Ch
Add / Del	Eject
Media	Media
I<< / TTX	I<<
I<< / TTX	Text
<< / Cancel	<<
<< / Cancel	Back
Size	3D
Subtitle	Subt
>>I / Hold	>>I
>> / Reveal	>>
Subpage	TV/R
Index	Options
Red	Red

Original	Sustituto
Green	Green
Yellow	Yellow
Blue	Blue

