





 


 

 





 

 
 



 













Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV	 AV
 -/--	 Guide
 TV TX	 Text
 OK	 Ok
 Up / CH+	 Up

Original	Sustituto
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 [≡]	 Info
 Mix	 Shift + Text
 Brightness	 Shift + 1
 Contrast	 Shift + 2
 Color	 Shift + 3
 Menu	 Menu
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue





	Original	Sustituto	Original	Sustituto
	Stop	Stop		
	Reveal	Play		
	Update	Pause		
	Clock	Options		
	Sub	Subt		
	Double	Dual		
	Stereo A B	I<<		
	Stereo Sol	<<		
	Stereo Fa	>>		
	Stereo	>>I		
	Stereo PS	List		

