



Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute / Dimmer
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec		Rec / Rec Mode
	<<		<< / Tune-
	>>		>> / Tune+
	Lang		Audio / Lang I/II
	Source (Games)		Eject / Surround
	Movie-Music-Phot		Picture / Format
	[≡]..		Zoom / Size
	*/O		Sleep / Timer
	TV		TV/Radio /
	Q.Menu		D.Menu / Top
	[-O-]		Setup / OPT /
	[≡]/Text		Text / Goto
	Menu		Menu / Home
	Up		Up
	i		Info / Angle
	Left		Left
	OK		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Back		Back / Return
	Vol+		Vol+
	World (Violet)		Smart / List
	PR+		CH+ / Page+
	Vol-		Vol-
	*/Q		Display / Media
	PR-		CH- / Page-
	1		1
	2		2





Original	Sustituto	Original	Sustituto
3 def 3	<b>3</b> 3		
4 ghi 4	<b>4</b> 4		
5 jkl 5	<b>5</b> 5		
6 mno 6	<b>6</b> 6		
7 pqrs 7	<b>7</b> 7		
8 tuv 8	<b>8</b> 8		
9 wxyz 9	<b>9</b> 9		
Guide	<b>GUIDE EPG</b> Guide / EPG / --		
0	<b>0</b> 0		
Red	<b>NETFLIX SEARCH</b> Red / Netflix / Search		
Green	<b>APP REPEAT</b> Green / APP / Repeat		
Yellow	<b>YouTube REPEAT A-B</b> Yellow / YouTube / Repeat		
Blue	<b>Prime Video RANDOM</b> Blue / Prime Video / Random		
Recall	<b>SHIFT + RETURN BACK</b> Shift + Back / Return		

Original	Sustituto

