 

 


















 
















Original	Sustituto
 Power	 Power
 Auto / Eject	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 GUIDE
 Back	 BACK
 Vol+	 + VOL
 Vol-	 VOL -
 Title	 HOME SMART

Original	Sustituto
 Display	 DISPLAY INFO
 CH+	 + CH
 CH-	 CH -
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Menu	 E-MANUAL D.MENU
 LCD Menu	 TOP MENU MENU
 DVD Setup	 SETTINGS OPT
 Input	 TIMER AV
 P.Mode	 PICTURE FORMAT
 A.Mode	 SOUND DUAL
 Mute	 MUTE
 Play / Pause	 PLAY MODE
 Stop	 Stop





Original		Sustituto		Original	Sustituto
	Slow / Step		Pause		
	Audio / Nicam		Shift + Dual		
	Text / <<		Text		
	Text / <<		<<		
	>> / Mix		>>		
	Hold / Goto		Shift + Stop		
	Picture / Subtitle		Shift + Format		
	I<< / Index		I<<		
	>>I / Size		>>I		
	Reveal / Zoom		Shift + Eject		
	Subpage /		Shift + Subt		
	Picture / Subtitle		Subt		
	Red / Program		Red		
	Green / Intro		Green		
	Yellow / Repeat		Yellow		
	Blue / A-B		Blue		

