


 













 








 









Original	Sustituto
 Power	 Power
 P/I Scan	 Media
 P/N	 Blue
 Open/Close	 Eject
 Prog	 Sleep
 Subtitle	 Subt
 Angle	 Red
 Language	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Sustituto
 0	 0
 10+	 Guide
 Goto	 Pre Ch
 Setup	 Options
 Menu	 Menu
 Zoom	 Shift + Eject
 Repeat	 Text
 Display	 Info
 A-B	 List
 Title	 3D
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 R/L	 TV/R
 PBC	 Format





	Original	Sustituto	Original	Sustituto
	Step	 AV		
	Return	 Back		
	Slow	 Smart		
	Resume	 D. Menu		
	Vol+	 Vol +		
	Vol-	 Vol -		
	Mute	 Mute		
	<<	 <<		
	>>	 >>		
	I<<	 I<<		
	>>I	 >>I		
	Stop	 Stop		
	Play	 Play		
	Pause	 Pause		

