 






 


 

 

 
 

 

 











Original	Sustituto
 Function	 Power
 Language	 Dual
 Screen On/Off	 Smart
 Setup	 Options
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Info/Display	 Info
 Stop/USB/Card	 Stop
 DVD Menu	 D. Menu
 Title	 List
 Tv/Radio	 TV/R
 TTX	 Text
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up
 Down	 Down

Original	Sustituto
 Right	 Right
 Left	 Left
 OK	 Ok
 Play	 Play
 Pause	 Pause
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EPG/Program/Angl	 Guide
 Zoom/Slow	 3D





	Original	Sustituto	
	<<	 <<	
	<<	 <<	
	>>	 >>	
	>>	 >>	
	Subtitle	 Subt	
	Audio	 +  Shift + Dual	
	Search	 +  Shift + TV/R	
	FAV/Repeat	 Pre Ch	

	Original	Sustituto

