



| Original | Sustituto |
|----------|------------|
| | Power |
| | Mute |
| | 1 |
| | 2 |
| | 3 |
| | 4 |
| | 5 |
| | 6 |
| | 7 |
| | 8 |
| | 9 |
| | 0 |
| | TV/Radio / |
| | SAT |
| | SAT |
| | EPG |
| | Menu |

| Original | Sustituto |
|----------|---------------|
| | FAV |
| | Exit |
| | Up / CH+ |
| | Up / CH+ |
| | Down / CH- |
| | Down / CH- |
| | Left / Vol- |
| | Left / Vol- |
| | OK |
| | Right / Vol+ |
| | Right / Vol+ |
| | Red / Audio |
| | Red / Audio |
| | Green / Mode |
| | Yellow / Disp |
| | Yellow / Disp |
| | Blue |



| Original | Sustituto |
|----------|-----------------------------|
| | Fav / Marker / PC |
| | Exit / Cancel / Clear |
| | Up |
| | CH+ / Page+ |
| | Down |
| | CH- / Page- |
| | Left |
| | Vol- |
| | OK |
| | Right |
| | Vol+ |
| | Red / Netflix / Search |
| | Audio / Lang I/II |
| | Green / APP / Repeat |
| | Yellow / YouTube / Repeat |
| | Display / Media |
| | Blue / Prime Video / Random |



| Original | Sustituto |
|------------|------------------|
| Page+ | Shift + CH+ / |
| Page- | Shift + CH- / |
| Recall | Back / Return |
| F1 /Info | Info / Angle |
| F1 /Info | Shift + 1 |
| F2 / SUB | Subtitle / EQ |
| F2 / SUB | Shift + 2 |
| F3 / Goto | Shift + Text / |
| F3 / Goto | Shift + 3 |
| TXT | Text / Goto |
| << | << / Tune- |
| >> | >> / Tune+ |
| I<< | I<< / Preset- |
| >>I | >>I / Preset+ |
| Play | Play / Slow |
| Stop / USB | Stop / Hold |
| Stop / USB | AV / Input / RDS |

| Original | Sustituto |
|------------|-----------------------|
| Stop / USB | Shift + 8 |
| Pause | Pause / Step / Freeze |
| Rec | Rec / Rec Mode |

