




Original	Sustituto
 Power	 Power
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 M	 Menu
 [i]	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Sustituto
 0	 0
 -/--	 Guide
 PP	 Back
 P/CH+	 Ch +
 P/CH-	 Ch -
 P<P	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 I-II	 Dual
 TV	 TV/R
 AV	 AV
 Red/Sound	 Red
 Green/Picture	 Green
 Yellow/Feature	 Yellow
 Blue/Install	 Blue
 [≡]	 Text





Original		Sustituto		Original		Sustituto	
	[≡o]	HOME SMART	Smart				
	[≡+]	PICTURE FORMAT	Format				
	[≡x]/[· ·]	ECO 3D	3D				
	[/≡]/[*]	AD SUBT	Subt				
	[≡◆]/[+]	SETTINGS OPT	Options				
	[≡?]/PC	APP MEDIA	Media				
	[≡i]	DISC NAV LIST	List				

