 

















 

















 



 

 






 
 









Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV/CL	 AV / Input / RDS
 Zoom	 Zoom / Size
 [...] / Subtitle	 Subtitle / EQ
 Audio / Language	 Audio / Lang I / II
 ◀ / Camera	 Shift + Info / Angle
 ?	 Setup / OPT /

Original	Sustituto
 ECO	 Display / Media
 CEC	 Smart / List
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z / Back	 Back / Return
 PR+	 CH+ / Page+
 Up	 Up
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 PR-	 CH- / Page-
 TVG / Top Menu	 Guide / EPG / -/--
 TVG / Top Menu	 D.Menu / Top
 TXT / Menu	 Text / Goto

 

















 



















 



 


Original	Sustituto	Original	Sustituto
	TXT/Menu		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Shift + Zoom /
	Rec/l>		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+





Original	Sustituto
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 AV / Input / RDS
	 Zoom / Size
	 Subtitle / EQ
	 Audio / Lang I/II
	 Shift + Info / Angle
	 Setup / OPT /

Original	Sustituto
	 Display / Media
	 Smart / List
	 Mute / Dimmer
	 Info / Angle
	 Back / Return
	 CH+ / Page+
	 Up
	 Vol-
	 Left
	 OK
	 Right
	 Vol+
	 Down
	 CH- / Page-
	 Guide / EPG / -/--
	 D.Menu / Top
	 Menu / Home





Original	Sustituto	Original	Sustituto
	TXT/Menu		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Shift + Zoom /
	Rec/l>		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+





Original	Sustituto
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	AV / Input / RDS
	Zoom / Size
	Subtitle / EQ
	Audio / Lang I/II
	Shift + Info / Angle
	Setup / OPT /

Original	Sustituto
	Display / Media
	Smart / List
	Mute / Dimmer
	Info / Angle
	Back / Return
	CH+ / Page+
	Up
	Vol-
	Left
	OK
	Right
	Vol+
	Down
	CH- / Page-
	Guide / EPG / -/--
	D.Menu / Top
	Text / Goto



 

























 





 







 

 




 





Original	Sustituto
	Menu / Home
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Shift + Zoom /
	Rec / Rec Mode
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	< / Preset-
	> / Preset+
	<< / Tune-
	>> / Tune+

Original	Sustituto






 




 

 





 













Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AV/CL	 AV / Input / RDS
 Zoom	 Zoom / Size
 [...] / Subtitle	 Subtitle / EQ
 Audio / Language	 Audio / Lang I / II
 ◀ / Camera	 Shift + Info / Angle
 ?	 Setup / OPT /

Original	Sustituto
 ECO	 Display / Media
 CEC	 Smart / List
 Mute	 Mute / Dimmer
 i	 Info / Angle
 Z / Back	 Back / Return
 PR+	 CH+ / Page+
 Up	 Up
 Vol-	 Vol-
 Left	 Left
 OK	 OK
 Right	 Right
 Vol+	 Vol+
 Down	 Down
 PR-	 CH- / Page-
 TVG / Top Menu	 Guide / EPG / -/--
 TVG / Top Menu	 D.Menu / Top
 TXT / Menu	 Text / Goto





	Original	Sustituto	Original	Sustituto
	TXT/Menu	 Menu / Home		
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	[<>]	 Shift + Zoom /		
	Rec/l>	 Rec / Rec Mode		
	Play	 Play / Slow		
	Pause	 Pause / Step / Freeze		
	Stop	 Stop / Hold		
	<	 << / Preset-		
	>	 >> / Preset+		
	<<	 << / Tune-		
	>>	 >> / Tune+		

