



 


 

 

 









 

 




Original	Sustituto
	 Power
	 Mute
	 Format
	 Dual
	 3D
	 Smart
	 Play
	 Pause
	 Stop
	 AV
	 Media
	 TV/R
	 1
	 2
	 3
	 4
	 5

Original	Sustituto
	 6
	 7
	 8
	 9
	 0
	 Eject
	 Pre Ch
	 Back
	 Ch -
	 Ch +
	 Vol -
	 Vol +
	 Up
	 Right
	 Down
	 Left
	 Ok





Original		Sustituto		Original		Sustituto	
	Info		Info				
	Menu		Menu				
	[+]		Options				
	[?]		D. Menu				
	[◆]		Subt				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Text / Mix		Text				
	[≡x]		Exit				
	[≡:]		Guide				

