





 
 
 


 

 





	Original	Sustituto	Original	Sustituto
	 Power	 Power	 Exit	 Exit
	 Mute	 Mute	 Up	 Up
	 1	 1	 Down	 Down
	 2	 2	 Right	 Right
	 3	 3	 Left	 Left
	 4	 4	 OK	 Ok
	 5	 5	 Vol+	 Vol +
	 6	 6	 Vol-	 Vol -
	 7	 7	 Sound	 Shift + Dual
	 8	 8	 PIC	 Options
	 9	 9	 CH+	 Ch +
	 0	 0	 CH-	 Ch -
	 Audio	 Dual	 Sleep	 Sleep
	 Recall	 Back	 Aspect	 3D
	 Tv-Menu	 Menu	 Freeze	 Shift + Media
	 Source	 AV	 Tv/Radio	 TV/R
	 CH.List	 List	 Text	 Text





Original		Sustituto		Original		Sustituto	
	EPG		Guide		I<<		I<<
	FAV		Pre Ch		>>I		>>I
	Info		Info		Play		Play
	Red		Red		Pause		Pause
	Green		Green		Stop		Stop
	Yellow		Yellow		Rec/Rep		Rec
	Blue		Blue				
	Reveal		Eject				
	Hold		D. Menu				
	List		Smart				
	Index		Shift + Info				
	Subpage		Shift + Subt				
	Size		Format				
	MIX		Media				
	Subtitle		Subt				
	<<		<<				
	>>		>>				

