


 


 




 



 

 

 








 



 







 

 

 









Original	Sustituto	Original	Sustituto
 Power	 Power	 List / Goto	 List
 Mute	 Mute	 Menu	 Menu
 Sleep	 Sleep	 Source	 AV
 P.Mode	 Shift + Format	 Aspect	 Format
 S.Mode	 Dual	 Recall	 Back
 Rec	 Rec	 Info	 Info
 DTV	 Smart	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 CH -	 Ch -
 6	 6	 CH +	 Ch +
 7	 7	 Vol -	 Vol -
 8	 8	 Vol +	 Vol +
 9	 9	 Audio	 Shift + Dual
 0	 0	 FAV / Title	 Pre Ch





Original	Sustituto
 Exit	 Exit
 EPG / Display	 Guide
 EPG / Display	 Shift + Info
 Index / I<<	 I<<
 Hold / >>I	 >>I
 Cancel / <<	 <<
 Size / >>	 >>
 TTX / A-B	 Text
 Mix / Play/Pause	 Eject
 Mix / Play/Pause	 Play
 Mix / Play/Pause	 Pause
 Subpage / Stop	 Stop
 Subpage / Stop	 Shift + Subt
 Subtitle	 Subt
 Reveal / Eject	 Shift + Exit
 Freeze / Repeat	 Shift + Pause
 TV/Radio / Setup	 Options

Original	Sustituto
 Freeze / Repeat	 Shift + Text
 TV/Radio / Setup	 TV/R
 Rec Menu /	 Shift + Menu
 Rec Menu /	 D. Menu
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

