 











 








 
 





 

















 




| Original | Sustituto |
|---|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  DTV |  Shift + 1 |
|  DTV |  TV/Radio / |
|  Radio |  Shift + TV/Radio / Program |
|  Radio |  Shift + 6 |
|  USB |  Shift + 8 |
|  DVD |  Shift + 2 |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |

| Original | Sustituto |
|--|---|
|  Tv Guide |  Guide / EPG / -/-- |
|  0 |  0 |
|  Recall |  Back / Return |
|  Vol+ |  Vol+ |
|  P.Mode |  Picture / Format |
|  CH+ |  CH+ / Page+ |
|  S.Mode |  Sound / Title |
|  Vol- |  Vol- |
|  FAV |  Fav / Marker / PC |
|  CH- |  CH- / Page- |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Exit |  Exit / Cancel / Clear |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Source |  AV / Input / RDS |





| Original | Sustituto |
|--|--|
|  Down |  Down |
|  Info |  Info / Angle |
|  Aspect |  Shift + Picture / Format |
|  Sleep |  Sleep / Timer |
|  Audio |  Audio / Lang I/II |
|  Subtitle |  Subtitle / EQ |
|  Text |  Text / Goto |
|  Text Hold |  Shift + Stop / |
|  Zoom/Text/DVD |  Zoom / Size |
|  Power/Display |  Display / Media |
|  Power/Display |  Shift + Power |
|  DVD Menu |  D.Menu / Top |
|  Rec |  Rec / Rec Mode |
|  I<< |  I<< / Preset- |
|  >>I |  >>I / Preset+ |
|  Stop/Eject |  Stop / Hold |
|  Stop/Eject |  Eject / Surround |

| Original | Sustituto |
|---|---|
|  Rec List/DVD |  Setup / OPT / |
|  Rec List/DVD |  Smart / List |
|  << PVR/DVD |  << / Tune- |
|  >> PVR/DVD |  >> / Tune+ |
|  Pause |  Pause / Step / Freeze |
|  Play |  Play / Slow |
|  Red/Goto |  Shift + Text / |
|  Red/Goto |  Red / Netflix / Search |
|  Green/A-B |  Green / APP / Repeat |
|  Green/A-B |  Shift + Yellow / YouTube / |
|  Yellow/Angle/3D |  Yellow / YouTube / Repeat |
|  Yellow/Angle/3D |  Shift + Info / Angle |
|  Blue/Repeat |  Blue / Prime Video / Random |
|  Blue/Repeat |  Shift + Green / APP / |

