


 
 
 
 

 
 
 
 
 
 
 

 

 

 





 

 

 







Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Source		AV / Input / RDS
	0		0
	Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--

Original	Sustituto	Original	Sustituto
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	List		Smart / List
	CH +		CH+ / Page+
	Vol -		Vol-
	CH -		CH- / Page-
	Fav		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Recall		Back / Return
	Red / <<		Red / Netflix / Search
	Red / <<		<< / Tune-

 







 



 

 

 











 













 

 

 





 



 

 
 












	Original	Sustituto	Original	Sustituto
	Green / >>	 >> / Tune+		
	Green / >>	 Green / APP / Repeat		
	Yellow / I<<	 I<< / Preset-		
	Yellow / I<<	 Yellow / YouTube / Repeat		
	Blue / >>	 Blue / Prime Video / Random		
	Blue / >>	 >> / Preset+		
	Text / Play/Pause	 Text / Goto		
	Text / Play/Pause	 Pause / Step / Freeze		
	Text / Play/Pause	 Play / Slow		
	Stop / Still	 Stop / Hold		
	Timer / Subtitle	 Subtitle / EQ		
	Size / Aspect	 Zoom / Size		
	Cancel [≡X]	 +  Shift + Exit / Cancel / Clear		
	Radio	 TV/Radio /		
	Audio / I/II	 Audio / Lang I/II		
	Rec	 Rec / Rec Mode		





Original		Sustituto		Original		Sustituto	
	Power		Power		Left		Left
	Mute		Mute / Dimmer		Enter		OK
	1		1		Right		Right
	2		2		Menu		Menu / Home
	3		3		Down		Down
	4		4		Exit		Exit / Cancel / Clear
	5		5		Vol+		Vol+
	6		6		List		Smart / List
	7		7		CH+		CH+ / Page+
	8		8		Vol-		Vol-
	9		9		CH-		CH- / Page-
	[≡?]/Source		AV / Input / RDS		♥		Fav / Marker / PC
	0		0		Sleep		Sleep / Timer
	[≡i]/Info		Info / Angle		Index		Display / Media
	DMP		D.Menu / Top		Back		Back / Return
	Up		Up		Red		Red / Netflix / Search
	EPG		Guide / EPG / -/--		<<		<< / Tune-





Original	Sustituto
	 Green / APP / Repeat
	 >> / Tune+
	 Yellow / YouTube / Repeat
	 I<< / Preset-
	 Blue / Prime Video / Random
	 >>I / Preset+
	 Play / Slow
	 Pause / Step / Freeze
	 Text / Goto
	 Stop / Hold
	 Picture / Format
	 Subtitle / EQ
	 Zoom / Size
	 Setup / OPT /
	 TV/Radio /
	 Audio / Lang I/II
	 Rec / Rec Mode

Original	Sustituto

